

**Toyota Sera – suggested service intervals & schedule**

**Schedule A**

for cars which are only used for very short journeys or cars that spend most of their time town / city conditions. For other circumstances see Schedule B

System	Service Interval (odometer reading or months, whichever comes first	Maintenance services beyond 96000km (60,000m) should continue to be performed at the same intervals shown for each maintenance schedule																			
	Maintenance Items	X1000km	6	12	18	24	30	36	42	48	54	60	66	72	78	84	90	96	Months		
		X1000m	3.75	7.5	11.25	15	18.75	22.5	26.25	30	33.75	37.5	41.25	45	48.75	52.5	56.25	60			
Engine	Timing Belt																		R		
	Valve Clearance																		A	A: 72 months	
	Drive Belt		I: First period 96,000km (60,000 miles) or 72 months I: After that every 12000km (7500 miles) or 12 months																		
	Engine Oil & Filter		R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R: 6 months
	Engine Coolant		R: First period 72,000km (45,000 miles) or 36 months R: After that 48,000km (30,000 miles) or 24 months																		
	Exhaust Pipes				I					I					I				I		I: 24 months
Fuel	Idle Speed		A: First period 12,000km (7,500 miles) or 12 months, 2 <sup>nd</sup> period 24,000km (15,000m) or 24 months A: After that every 12400km (15000 miles) or 24 months																		
	Air Filter		I	I	I	I	I	I	I	R	I	I	I	I	I	I	I	I	R	I: 6 months R: 36 months	
	Fuel Lines and Connections									I									I	I: 36 months	
	Fuel tank cap gasket																		R	R: 36 months	
Ignition	Spark Plugs									R									R	R: 36 months	
Evap	Charcoal Canister																		I	I: 72 months	
Brakes	Brake linings and drums			I		I			I			I			I				I	I: 12 months	
	Brake pads and discs			I		I			I			I			I				I	I: 12 months	
	Brake lines pipes and hoses					I						I							I	I: 24 months	
Chassis	Steering Linkage			I		I			I			I			I				I	I: 12 months	
	Drive shaft boots			I		I			I			I			I				I	I: 12 months	
	Ball joints & dust covers			I		I			I			I			I				I	I: 12 months	
	Transaxle Oil					R				R				R					R	R: 24 months	
	Steering rack oil					I				I				I					I	I: 24 months	
	Rear wheel bearing									R									R	R: 48 months	
	Bolts on Body			I		I			I			I			I				I	I: 12 months	

A: check and adjust if necessary  
I: Inspect and correct if necessary  
R: Replace, change or lubricate

**Schedule B**

For items not listed, refer to Schedule A

System	Service Interval (odometer reading or months, whichever comes first	Maintenance services beyond 96000km (60,000m) should continue to be performed at the same intervals shown for each maintenance schedule									
	Maintenance Items	X 1000km	12	24	36	48	60	72	84	96	Months
		X 1000m	7.5	15	22.5	30	37.5	45	52.5	60	
Engine	Valve Clearance									A	A: 72 months
	Drive Belt	I: First period 96000km 60000m or 72 months I: After that every 12000km 7500 miles or 12 months									
	Engine Oil & Filter	R	R	R	R	R	R	R	R	R	R: 12 months
	Engine Coolant	R: First period 72000km 45000m or 36 months R: After that every 48000km 30000 miles or 24 months									
	Exhaust Pipes				I					I	I: 36 months
Fuel	Idle Speed										
	Air Filter				R					R	R: 36 months
	Fuel Lines and Connections									I	I: 36 months
	Fuel tank cap gasket									R	R: 72 months
Ignition	Spark Plugs				R					R	R: 36 months
Evap	Charcoal Canister									I	I: 72 months
Brakes	Brake linings and drums		I		I		I			I	I: 24 months
	Brake pads and discs		I		I		I			I	I: 24 months
	Brake lines pipes and hoses		I		I		I			I	I: 24 months
Chassis	Steering Linkage		I		I		I			I	I: 24 months
	Drive shaft boots		I		I		I			I	I: 12 months
	Ball joints & dust covers		I		I		I			I	I: 12 months
	Transaxle Oil		I		I		I			I	I: 24 months
	Steering rack oil		I		I		I			I	I: 24 months
	Rear wheel bearing				R					R	R: 48 months
	Bolts on Body		I		I		I			I	I: 24 months

A: check and adjust if necessary  
 I: Inspect and correct if necessary  
 R: Replace, change or lubricate

Adapted from 1995 Toyota Paseo repair manual, US specification by Andrew Cliffe [Andrew@toyotasera.co.uk](mailto:Andrew@toyotasera.co.uk)